

# Installation Instructions

## 5<sup>th</sup> Wheel Adapter Bracket Kit

Nissan Titan – Crew Cab/King Cab

(Installation of this kit on vehicles with cargo box of less than 6' requires installation of a Sidewinder Pinbox Coupler.)

### Part Numbers:

**58391**

30035 Rail Kit  
required for  
installation

### Equipment Required:


**Fastener Kit:** 58391F, (30512-Fastener Kit from 30035)

**Wrenches:** 3/4, 7/8

**Drill Bits:** 3/16", 17/32"

**Other Tools:** Center Punch, Measuring Tape

**WARNING:** Under no circumstances do we recommend exceeding the towing vehicle manufacturers recommended vehicle towing capacity.

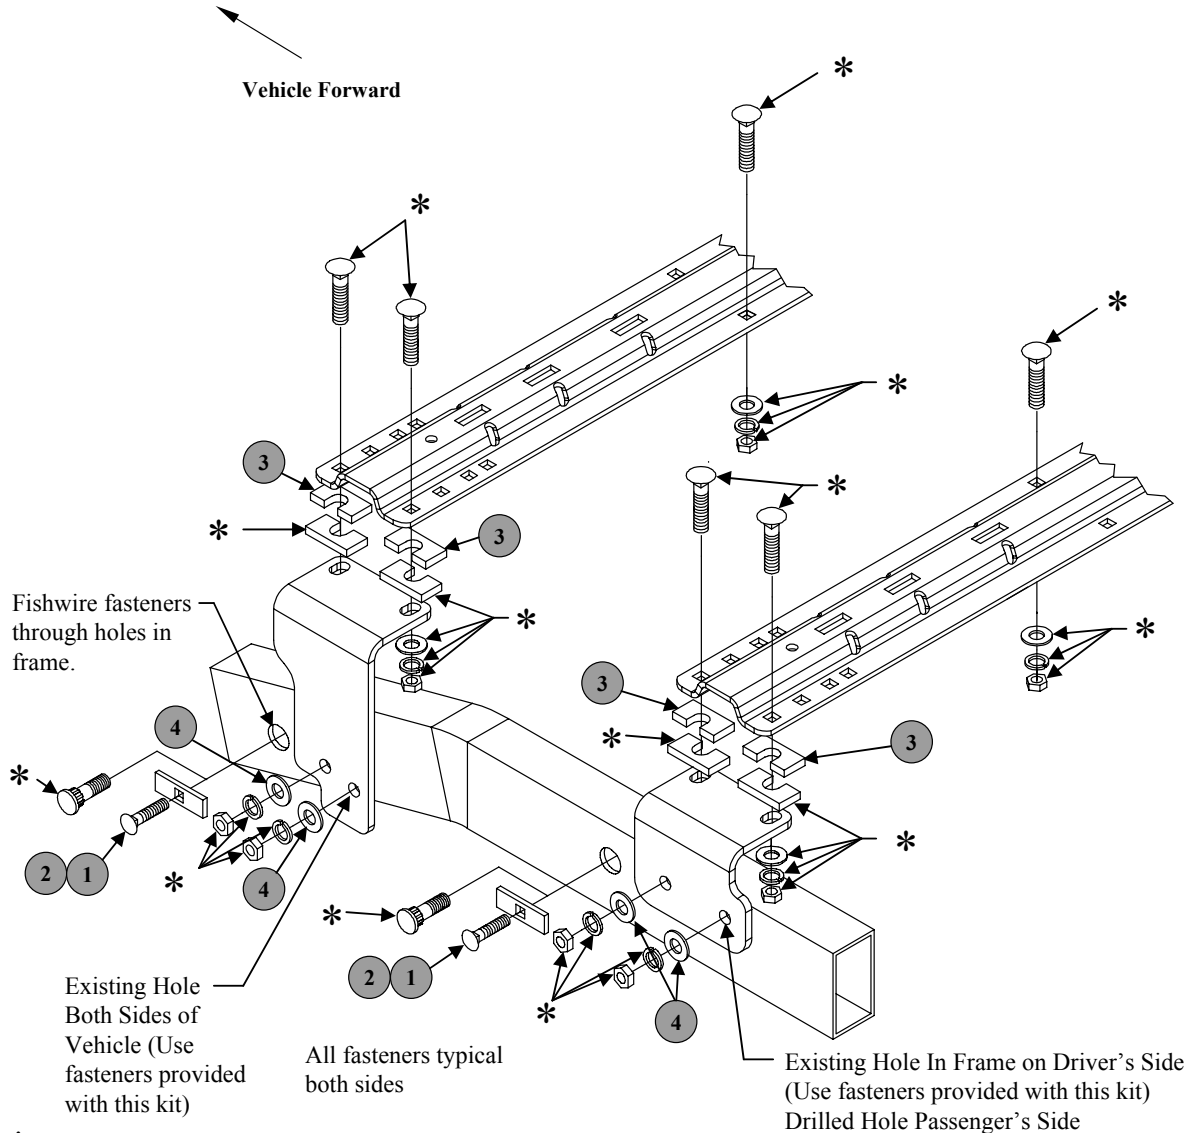

\* - Fastener from 30035 Fastener Kit

1	Qty. (4)	1/2-13 X 1.75 Carriage Bolt	3	Qty. (6)	5/16 X 1.00 X 2.00 – U shaped Block
2	Qty. (4)	1/4 X 1.00 X 3.00 Block	4	Qty. (8)	1/2 Flat Washer

**CAUTION!**



Read pages 2-3 of 30035 instructions before starting installation. Failure to do so could result in significant vehicle damage!

**IMPORTANT NOTES FOR THIS INSTALLATION:**

1. Use the 58391 service kit together with 30035 mounting kit. Read pages 1-3 of 30035 instruction for general information.
2. Bolts will need to be pulled through access holes in frame with supplied fish wire (see below).

3. Do not drill through both walls of frame. Drill only through wall of frame to which bracket is mounted.

4. Drill through frame at forward hole in each side bracket and both holes in passenger side rear side bracket.

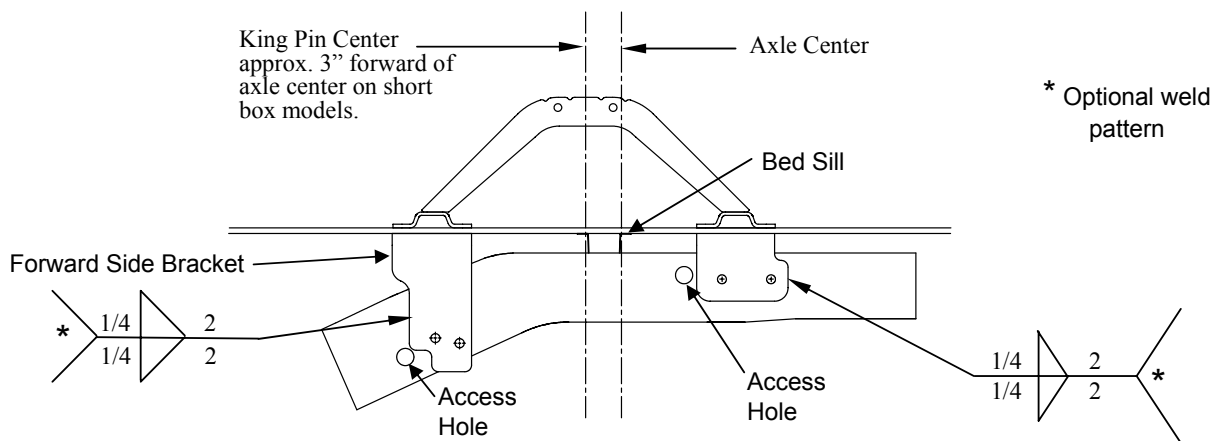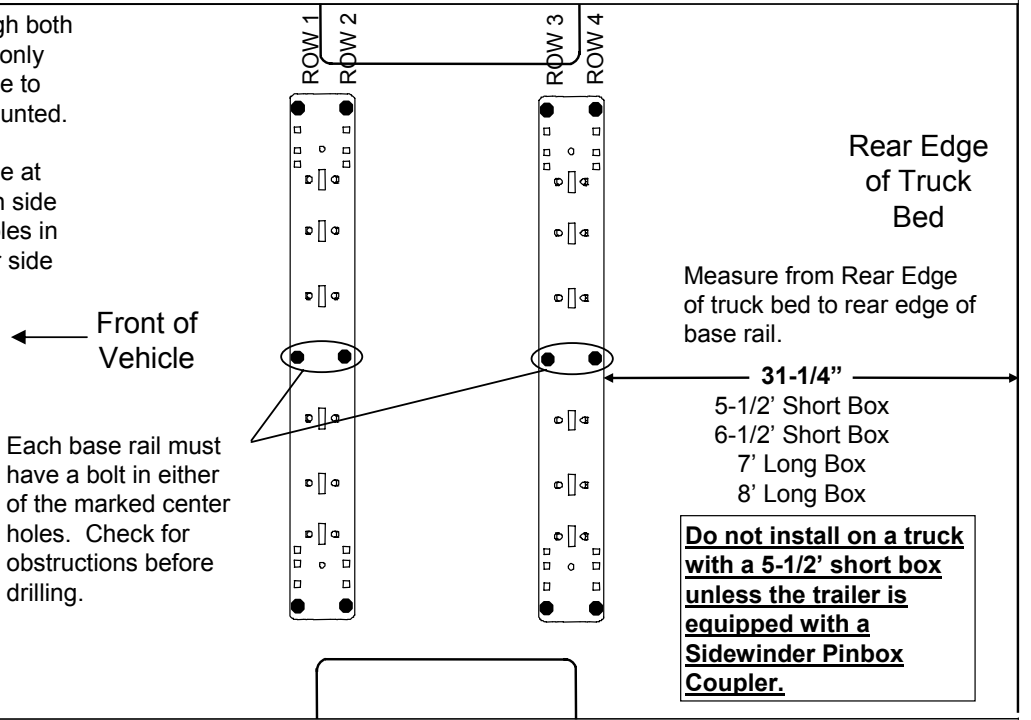

**CAUTION!**

Check for obstructions before drilling. Failure to do so could result in damaged fuel or brake lines, structural members, etc. TOWING PRODUCTS does its best to communicate tow vehicle manufacturer changes; however, it is ultimately the responsibility of the installer to prevent damage due to installation.