


Installation instructions
Instructions d'installation
Instrucciones de instalación

18240-037

REV 10/24/02

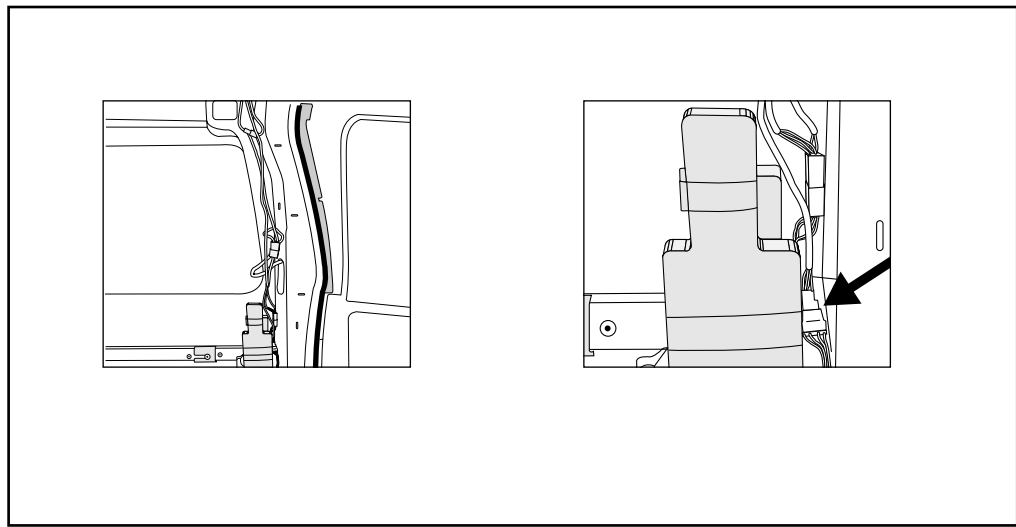

Installation Instructions

1. Open rear doors of the vehicle. On the passenger side remove the vehicle jack storage cover.
2. Locate the vehicle's factory tow harness connector behind the jack. It will be a green connector that mates to the end of the tow plug. Insert the tow plug and lock into place with connector lock provided. Be sure that the connector is fully inserted with locking tab in place.
3. Locate a suitable grounding point near the adapter
(Do not drill into vehicle floor or bed). Clean dirt from the area. Drill a 3/32" hole to secure the white wire using the eyelet and screw provided.
4. Test the installation with a test light or a trailer.
5. Secure all loose wires with cable tie provided. Reattach vehicle jack storage cover to its original position.